

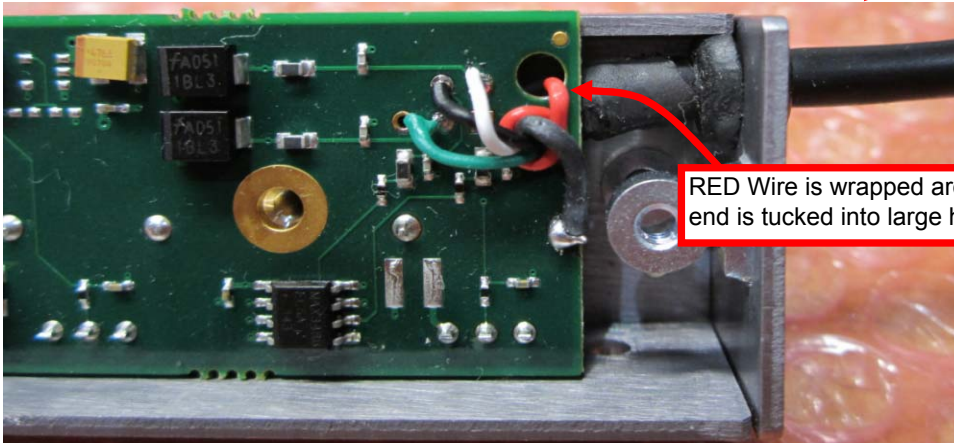
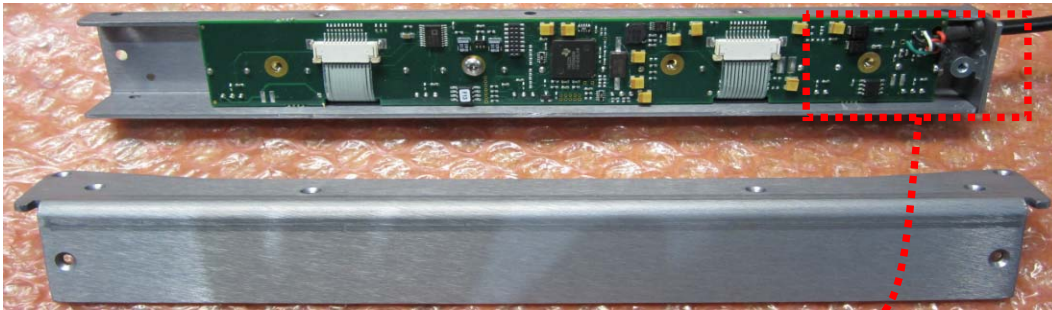


# FP8 MODIFICATION FOR USE WITH PC HUB GUI SOFTWARE

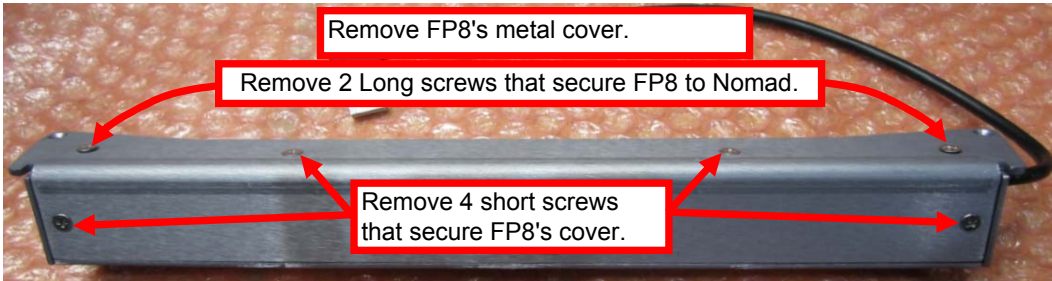


# FP8 MODIFICATION FOR USE WITH PC HUB GUI SOFTWARE

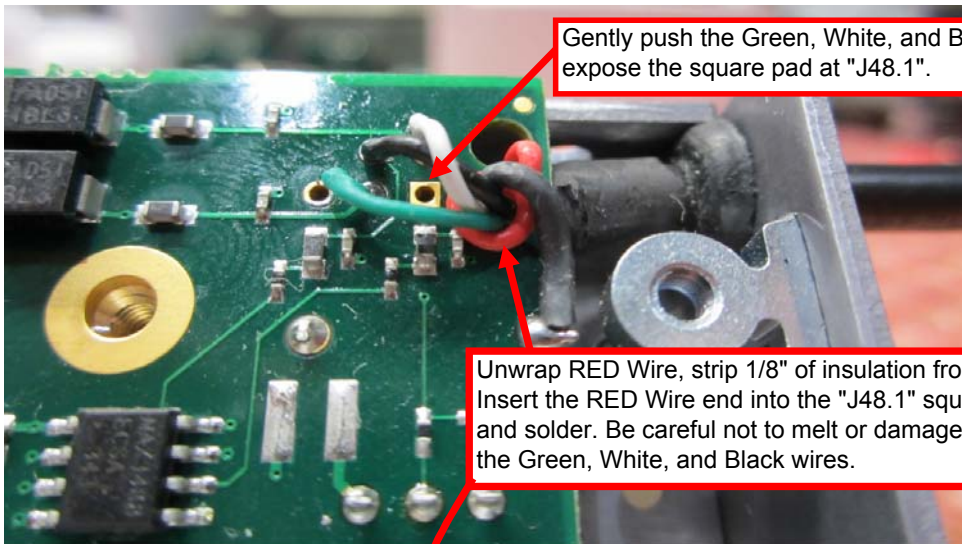


Gently push the Green, White, and Black wires to expose the square pad at "J48.1".

Unwrap RED Wire, strip 1/8" of insulation from end. Insert the RED Wire end into the "J48.1" square pad hole and solder. Be careful not to melt or damage insulation of the Green, White, and Black wires.

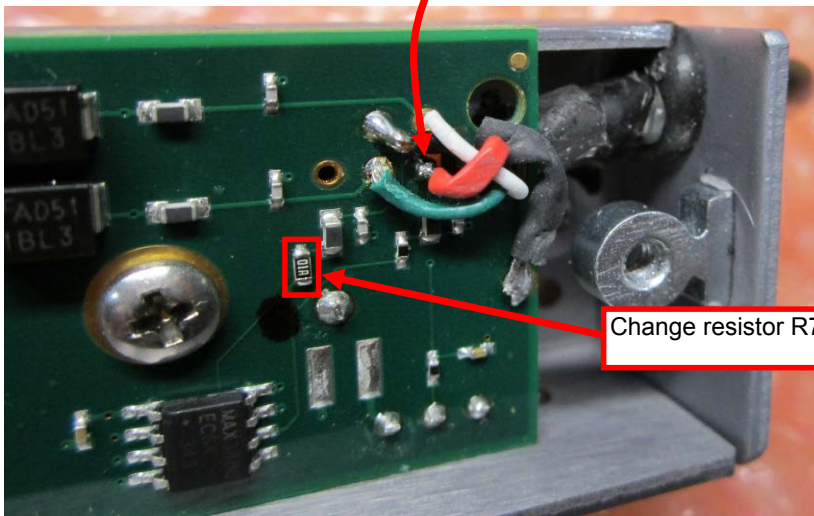

Change resistor R703 to 100-ohm 1% 0402.

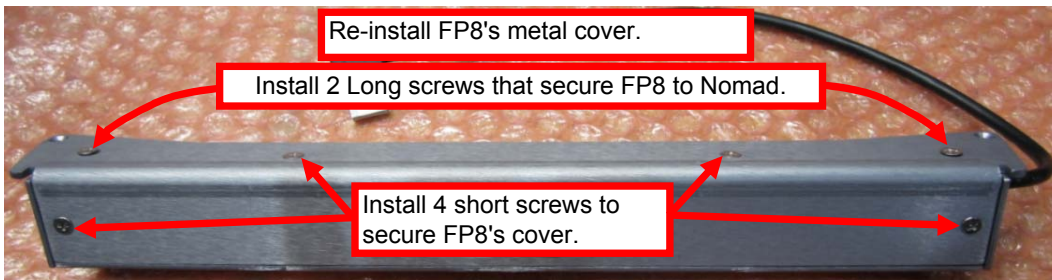

Re-install FP8's metal cover.

Install 2 Long screws that secure FP8 to Nomad.

Install 4 short screws to secure FP8's cover.

**FP8 MODIFICATION IS COMPLETE!**  
The FP8 is now ready to work with the PC HUB GUI SOFTWARE.