


# NOMAD RS422 connector

- 1 red
- 2 white
- 3 green
- 4 black (thin)
- 5 shield black (thick)

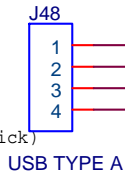

RS422-RXP

RS422-TXP

RS422-TXM

RS422-RXM

R1

1K



Be careful not to short the RED wire to ground!

- 1 BLACK - GND
- 2 BROWN - CTSn
- 3 RED - 5V
- 4 ORANGE - TXD
- 5 YELLOW - RXD
- 6 GREEN - RTSn



FTDI 232 CABLE (digikey 768-1015-ND)

Note R1 is optional. Without this resistor the Nomad may have trouble powering on if the PC is applying power to Nomad's serial port.

Title		
Nomad to FDTI 232 serial cable wiring diagram		
Size A	Document Number Zaxcom	Rev 2
Date:	Saturday, July 18, 2015	Sheet 1 of 1